







ISO 9001: 2015



((

Certificate 3.1

Size: DN 15 to 150 mm Ends: Flanges PN16/40 R.F.

Min Temperature : - 10°C **Max Temperature :** + 180°C

Max Pressure: 40 Bars up to DN50 (16 bars over)

Specifications: ISO 5211 mounting pad

PTFE filled with glass seat

Anti blow-out stem
Double antistatic device

Materials: Stainless steel ASTM A351 CF8M





SPECIFICATIONS:

- Full bore
- Anti blow-out stem
- Double antistatic device
- · PTFE filled with glass seat
- Handle with locking device up to DN50
- ISO 5211 mounting pad
- 2 pieces type (Split body)
- Hollow ball for DN125 and DN150

USE :

- Chemical industries, petrochemical industries, hydraulic installation, heating and water distribution
- Min and max Temperature Ts: -10°C to + 180°C
- . Max pressure Ps: 40 bars up to DN50, 16 bars over

RANGE:


• Ball valve with stainless steel body Ref. 765 from DN 15 to DN 150

ENDS:

• R.F. flanges PN40 up to DN50, PN16 over

PRESSURE / TEMPERATURE GRAPH (STEAM EXCLUDED):

Pressure (Bar)

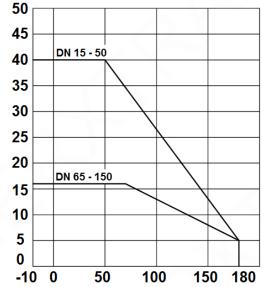


150 180 Temperature (°C)






MATERIALS DN 15 - 50 :

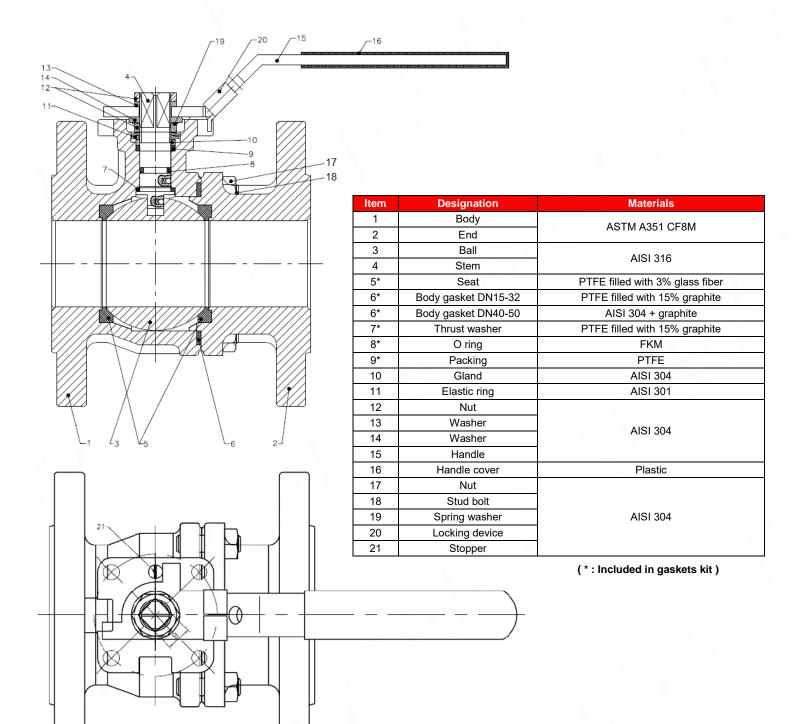






MATERIALS DN 65 - 100 :

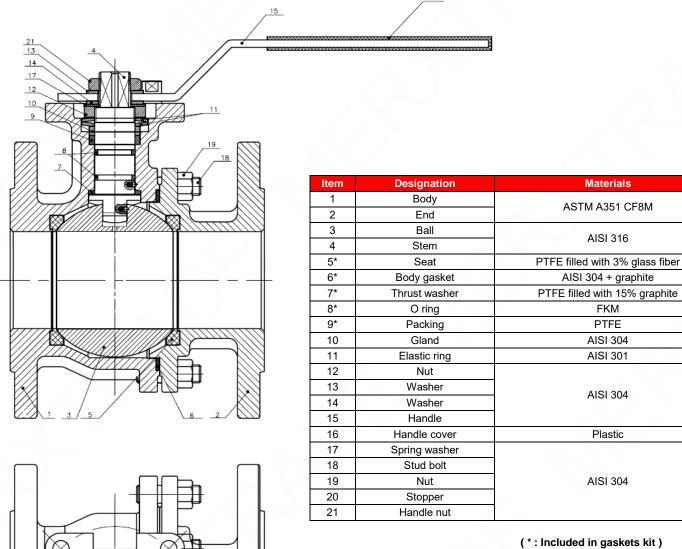


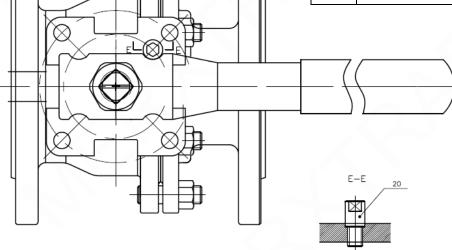





MATERIALS DN 125 - 150 :

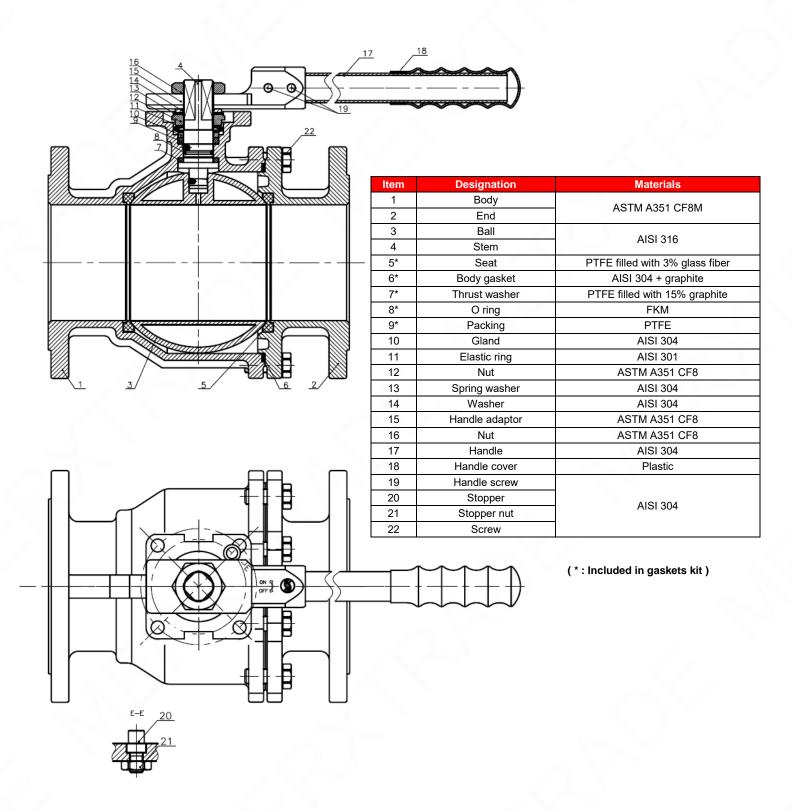






SIZE DN 15 - 50 (in mm) :

DN 15 - 50

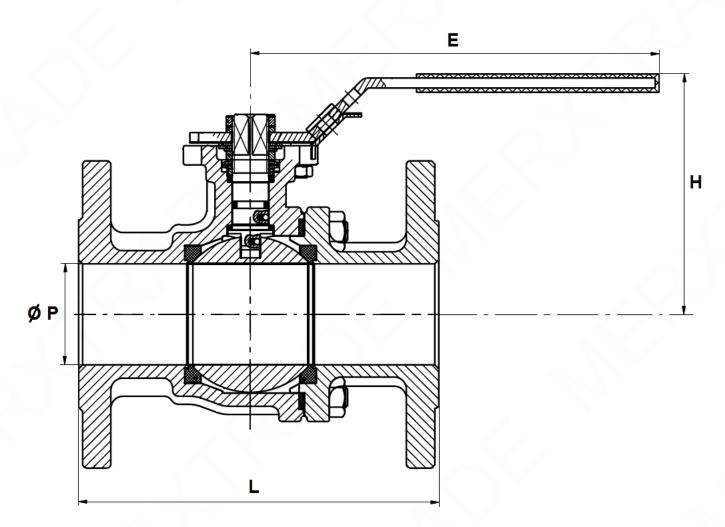


Ref.	DN	15	20	25	32	40	50
	ØΡ	15	20	25	32	40	50
	L	115	120	125	130	140	150
765	Е	161.2	161.2	161.2	204.5	204.5	204.5
	н	82.7	83.2	88.2	111	112	120
	Weight (Kg)	2.2	3.02	3.79	5.74	6.79	9.33





SIZE DN 65 - 100 (in mm):

DN 65 - 100

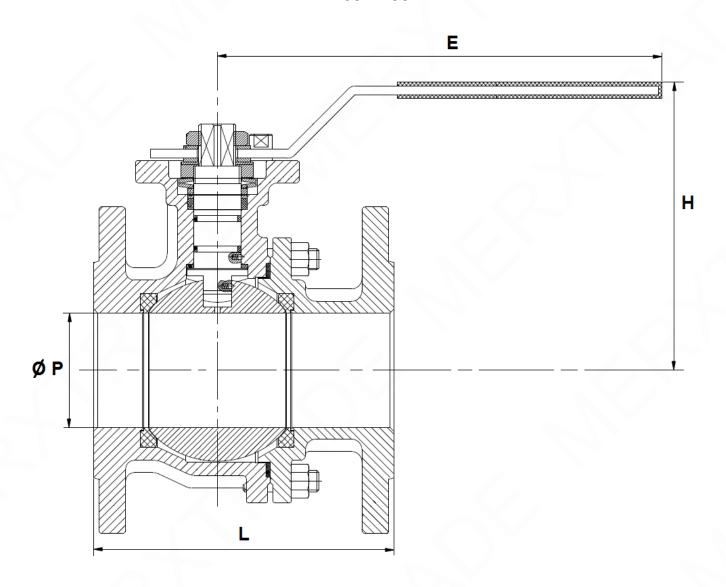


Ref.	DN	65	80	100
	ØΡ	65	80	100
	L	170	180	190
765	E	325	325	325
	Н	160	170	186
	Weight (Kg)	15.2	19.58	27.36





SIZE DN 125 - 150 (in mm):

DN 125 - 150

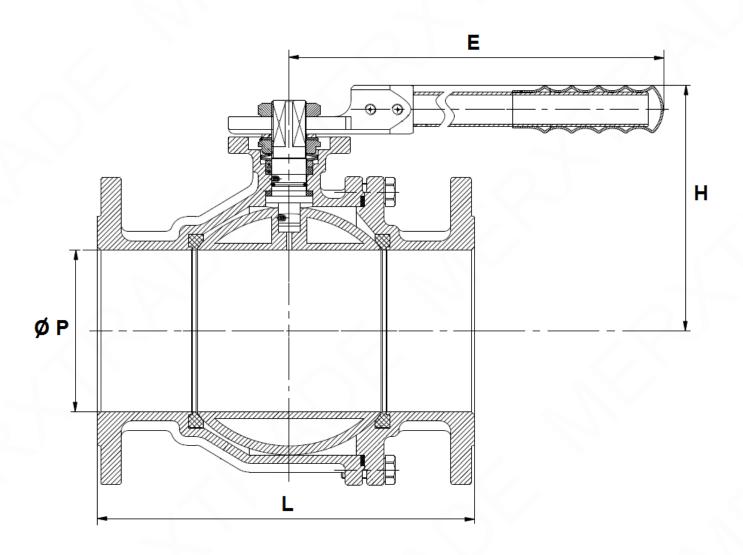

Ref.	DN	125	150
	Ø P	125	150
	L	325	350
765	E	520	620
	Н	211	228
	Weight (Kg)	38.86	50.72

MXT-7289-765






2 PIECES BALL VALVES FLANGED PN 16/40 INITIAL RANGE


ISO MOUNTING PAD AND STEM SIZE (in mm):





DN 65 - 100


DN 125 - 150

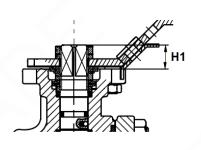


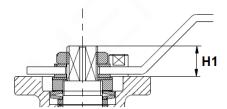

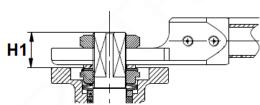

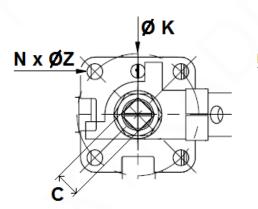

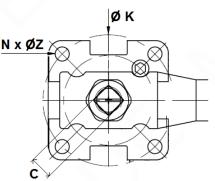

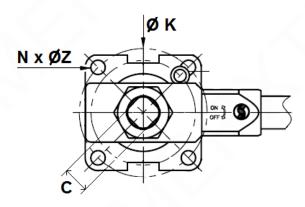


Ref.	DN	15	20	25	32	40	50	65	80	100	125	150
	С	9	9	11	14	14	14	17	17	17	27	27
	øк	42	42	50	50	70	70	102	102	102	125	125
765	ISO	F04	F04	F05	F05	F07	F07	F10	F10	F10	F12	F12
	NxØZ	4x6	4x 6	4x 7	4x7	4x9	4x 9	4x 11	4x 11	4x 11	4x14	4x14
	H1	11	10	11	16.5	16.5	16.5	21	21	21	34	34





FLANGES SIZE (in mm):

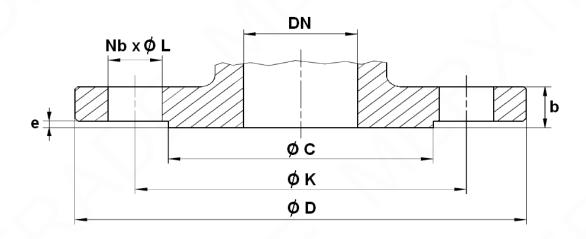

Ref.	DN	15	20	25	32	40	50	65	80	100	125	150
	øс	45	58	68	78	88	102	122	138	158	188	212
	Ø D	95	105	115	140	150	165	185	200	220	250	285
765	øк	65	75	85	100	110	125	145	160	180	210	240
	Nb x Ø L	4 x 14	4 x 14	4 x 14	4 x 18	4 x 18	4 x 18	4 x 18	8 x 18	8 x 18	8 x 18	8 x 22
	b	16	18	18	18	18	20	18	20	20	22	22
	е	2	2	2	2	3	3	3	3	3	3	3





TORQUE VALUES (in Nm without safety coefficient):

DN	15	20	25	32	40	50	65	80	100	125	150
Torque (Nm)	6	8	10	14	20	30	36	60	95	150	210

STANDARDS:

• Fabrication according to ISO 9001: 2015

 DIRECTIVE 2014/683/EU: CE N° 0035 Risk Category II module D1

• Certificate 3.1 on request

Designing according to EN 12516-1

• Tests according to API 598, table 6

• Flanges R.F. according to EN 1092-1 PN16

ISO 5211 mounting pad

• Length according to EN 558 series 27 (DIN 3202 F4/F5)

ADVICE: Our opinion and our advice are not guaranteed and MXT shall not be liable for the consequences of damages. The customer must check the right choice of the products with the real service conditions.





INSTALLATION INSTRUCTIONS

GENERAL GUIDELINES:

- Ensure that the valves to be used are appropriate for the conditions of the installation (type of fluid,pressure and temperature).
- Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.
- Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.
- Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).

INSTALLATION INSTRUCTIONS:

- Before installing the valves, clean and remove any objects from the pipes (in particular bits of sealing and metal) which could obstruct and block the valves.
- Ensure that both connecting pipes either side of the valve (upstream and downstream) are aligned (if they're not,the valves may not work correctly).
- Make sure that the two sections of the pipe (upstream and downstream) match, the valve unit will
 not absorb any gaps. Any distortions in the pipes may affect the thightness of the connection, the
 working of the valve and can even cause a rupture. To be sure, place the kit in position to ensure the
 assembling will work.
- If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the valve.
- Tighten the bolts in cross.
- It's recommended to operate the valve (open and close) 1 to 2 times per year